


# Ethernet II Controller

ND-12.055.1 EN

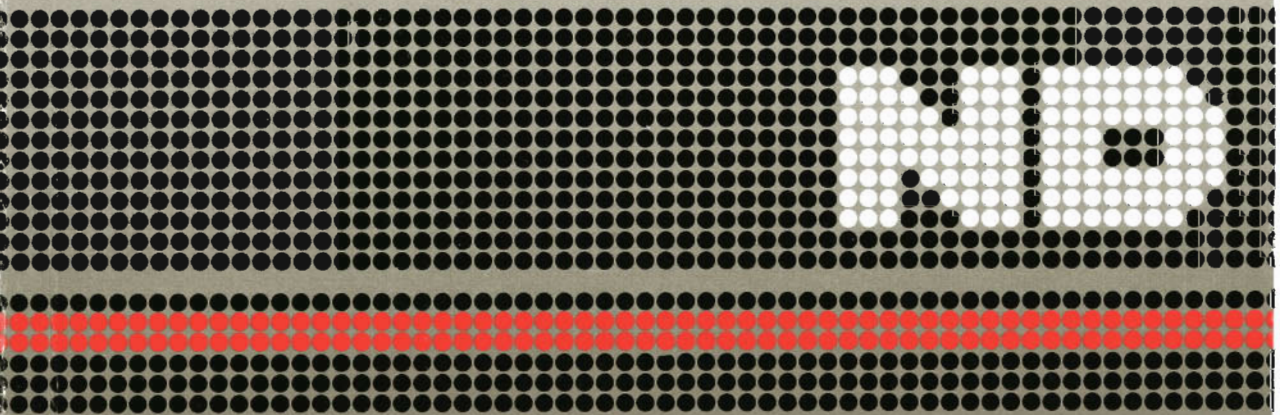



# **Ethernet II Controller**

ND-12.055.1 EN



<b>The product</b>	The Ethernet* II controller (ND number 110063).
<b>The reader</b>	This manual is intended for all personnel who require information about the Ethernet II Controller.
<b>Assumed background</b>	The reader is assumed to have a general knowledge of digital hardware design.
<b>The manual</b>	<p>This manual outlines the main features of the Ethernet controller and its installation. It is divided into the following three sections:</p> <ul style="list-style-type: none"><li>● 1. Introduction - a general overview, including an outline of the Ethernet protocol</li><li>● 2. The Controller - what it does and how</li><li>● 3. Installation - what you need to use and how to install the Controller</li></ul> <p>The appendices include a glossary of terms, Ethernet protocol details and an ND Ethernet product guide.</p>
<b>Related manuals</b>	<p>The following manuals may be useful:</p> <p>ECMA 57/TC12/83/51 Technical Report TR19 - Local Area Networks Safety Requirements.</p> <p>IEEE Std 802.3-1985 (ISO/DIS 8802/3) Carrier Sense Multiple Access with Collision Detection (CSMA/CD).</p> <p>Data sheets for:</p> <p>LANCE (Am7990) - AMD reference number 05698</p> <p>SIA (Am7992B) - AMD reference number 03378</p> <p>MFP (68901) - various vendors (Motorola, Mostek)</p>

\* Ethernet is a trade mark of the Xerox Corporation.



## Notation

---

<b>hex</b>	Where possible hexadecimal notation of numbers has been used.
<b>octal</b>	Octal numbers, commonly used by ND-100 users, are denoted by the subscript: <sub>8</sub> .
<b>binary</b>	Binary numbers have the subscript: <sub>2</sub> .
<b>bits</b>	Bits within registers are also described using subscripts e.g. Ethernet control register <sub>2</sub> is bit 2 of this register.  In the COSMOS Monitor example (pages 45-9), the following notation is used:
<b>highlight</b>	Highlighted text will be displayed by the computer.
<b><u>underline</u></b>	Where underlined text is shown, information is to be entered by the user. <u>↓</u> denotes carriage return.





## Table of contents

1	INTRODUCTION	1
	Architecture	4
	Ethernet protocol	6
2	THE CONTROLLER	9
2.1	68000 local processor	11
	68000 interrupt levels	12
2.2	LANCE	13
	Error reporting	14
2.3	SIA	15
2.4	Local memory	16
2.4.1	Local DRAM	16
	DRAM access priority	16
	Byte parity on memory	17
	Parity errors	17
	Power failure	18
	Local SRAM - DRAM protection	19
2.4.2	EPROM	20
2.4.3	Address decoding	21
	Addresses of other devices in the I/O address space	22
2.4.4	Ethernet transceiver power control	25
2.4.5	Multifunction Peripheral (MFP)	26
	MFP after RESET and initialization	28
2.4.6	ND-100 interface	28
	Ethernet control register	29
	Ethernet status register	30
3	INSTALLATION	31
3.1	What you need	33
	Ethernet transceiver	34
	Fan-out unit	34
	Transceiver cable	34
	Coaxial cable	35
	Coaxial accessories	36
	Repeaters	37
	Point-to-point cable	38

3.2	What to set . . . . .	39
	Thumbwheel selection of memory bank . . . . .	40
	Thumbwheel selection of Ethernet number . . . . .	41
3.3	How to connect to the network . . . . .	42
3.4	How to upgrade to an Ethernet II . . . . .	44
3.5	Ethernet statistics . . . . .	45
	Description of COSMOS Monitor statistics . . . . .	47

Table of appendices

---

Appendix A: GLOSSARY	51
Appendix B: ETHERNET PROTOCOL DETAILS	55
Frame format	57
IEEE 802.3 - Ethernet differences	58
Frame terminology	58
Manchester encoding	62
Appendix C: ND ETHERNET PRODUCT GUIDE	63
Ethernet accessories	65
OSI model and ND's implementation	66
Index	67

( x )

List of figures

---

1. The implementation of Ethernet II - OSI standard . . . . .	4
2. Block diagram of Ethernet II . . . . .	5
3. Block diagram of the LANCE . . . . .	13
4. Memory protection . . . . .	19
5. The Multifunction Peripheral (MFP) block diagram . . . . .	26
6. A point-to-point link . . . . .	38
7. LED activity and thumbwheel selection on an Ethernet II card . . . . .	39
8. Connecting to the Ethernet . . . . .	42
9. A typical multi-station, multi-segment Ethernet . . . . .	43
10. Upgrading from an Ethernet I . . . . .	44
11. Calling Ethernet statistics from the COSMOS Monitor . . . . .	45
12. Typical Ethernet statistics returned by the COSMOS Monitor	46
13. Examples of Manchester-encoded signals . . . . .	62



List of tables

---

1. Addresses used in the I/O address space . . . . .	22
2. Thumbwheel selection of memory banks . . . . .	40
3. Thumbwheel selection of Ethernet address . . . . .	41





---

CHAPTER 1 INTRODUCTION

---



---

**CHAPTER 1 INTRODUCTION**

---

The Ethernet II controller is implemented on a single-card for ND-100 based systems. The controller conforms to the IEEE 802.3 and ISO/DIS 8802/3 standards.

Systems using the two-card Ethernet I from Norsk Data can be upgraded to this single card option (see Section 3.4). ND-100 based systems can drive a maximum of four Ethernet II controllers.


This chapter outlines the basic features of the controller and of the protocol required for communicating on an Ethernet.

## Architecture

---

The Ethernet controller implements the three lowest layers of the OSI seven layer model for system communication. The network layer (level 3) is implemented by software running on the Ethernet controller with the controller's hardware and external transceiver implementing the data link and physical layers (levels 2 and 1).

A complete overview of the seven layers is given in Appendix C.

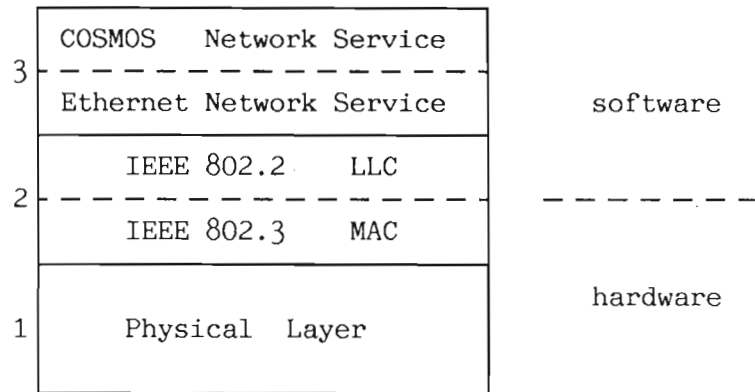

LLC : Logical Link Layer  
 MAC : Medium Access Layer  
 COSMOS: proprietary software

*Figure 1. The implementation of Ethernet II - OSI standard*

The Ethernet II controller has the following hardware architecture:

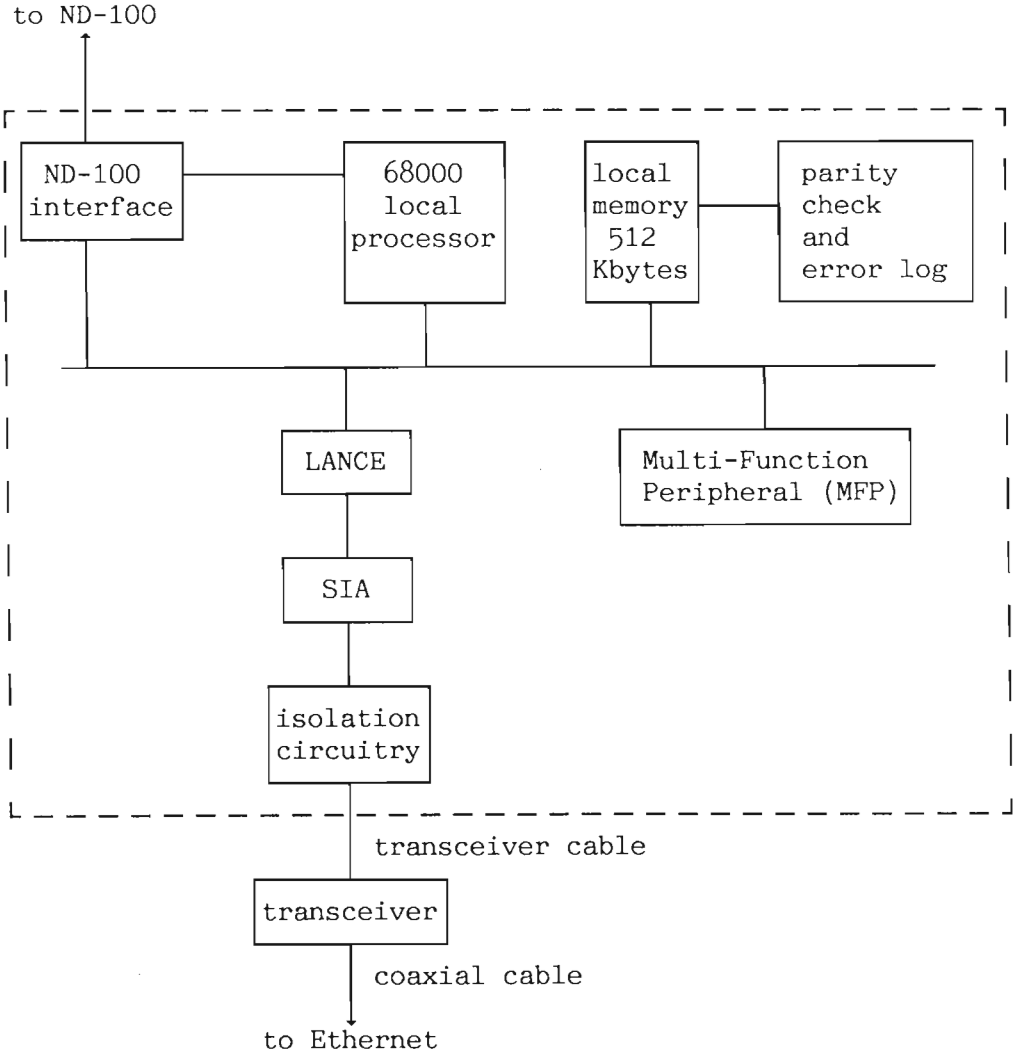


Figure 2. Block diagram of Ethernet II

## Ethernet protocol

---

Ethernet is a protocol designed for baseband local area networks (LANs). The network has a bus topology using an algorithm for bus access known as CSMA/CD (Carrier Sense Multiple Access with Collision Detection).

### CSMA/CD

Access to the network is as follows:

All stations on the Ethernet continually listen to network activity.

A controller wishing to transmit waits for a quiet period (i.e. no activity on the network - none of the stations are transmitting) and begins to transmit.

### collision

If another station begins to transmit at almost the same time, the transmitted signals will collide and the data on the network becomes garbled.

The transmitting nodes detect this collision and continue to transmit for a predetermined length of time. This ensures that all the nodes on the network recognize that a collision has occurred. The nodes transmit a **jam** pattern of any pattern except that of the CRC. If the collision occurred during the preamble, the preamble is still sent followed by the jam pattern.

The action taken by a receiving controller during collision depends upon the time taken to detect the collision.

- If within  $4.8\mu\text{s}$ , an address mismatch has occurred, the packet will be rejected and the Silo pointer reset.
- If within  $51.2\mu\text{s}$ , the packet will be rejected as a **runt packet**.

- After 51.2 $\mu$ s, a **late collision** has occurred and the packet written into the Silo (the FIFO on the LANCE - see Section 2.2) but with the CRC error bit set.

The transmitting nodes then **backoff**, each delaying a random period of time before retransmitting. Sixteen attempts, with increasing timeout range, can be made by the controller before an error message is given due to excessive collisions on the network.

The frame formats of packets transmitted and received by the controller are given in Appendix B.

The Ethernet II controller conforms to the following protocol standards:

- IEEE 802.3
- ECMA 80/81/82
- ISO/DIS 8802/3





---

**CHAPTER 2 THE CONTROLLER**

---



---

**CHAPTER 2 THE CONTROLLER**

---

The controller is implemented on a single card featuring:

- a 68000 local processor
- a LANCE (Local Area Network Controller for Ethernet)
- a SIA (Serial Interface Adapter)
- local memory
- Ethernet transceiver power control
- a MFP (Multi-Function Peripheral controller)
- ND-100 bus interface

### **2.1 68000 local processor**

---

The 68000 is a 10 MHz, 16-bit processor dedicated to the I/O processing required by the Ethernet controller. Its basic control signals - HALT and RESET - are directly set by the ND-100.

## 68000 interrupt levels

---

These are assigned as follows:

level	interrupt source
7	ND-100 power low
6	ND-100 OPCOM
5	parity error
4	test console (PTC)
3	MFP (and ND-100) *
2	LANCE interrupt
1	not used
0	indicates no interrupt

\* see Section 2.4.5


Interrupt priority is assigned such that level 7 has highest priority and level 0 the lowest.

Detailed and introductory descriptions of the 68000 can be found in the vendors' manuals.

## 2.2 LANCE

The LANCE (Local Area Network Controller for Ethernet - Am7990) is a single integrated circuit featuring:

- on-board DMA and buffer management (48 byte FIFO known as a Silo)
- network and packet error reporting
- back-to-back packet reception
- network diagnostics (see page 46):
  - internal/external loopback
  - CRC logic check
  - time domain reflectometer

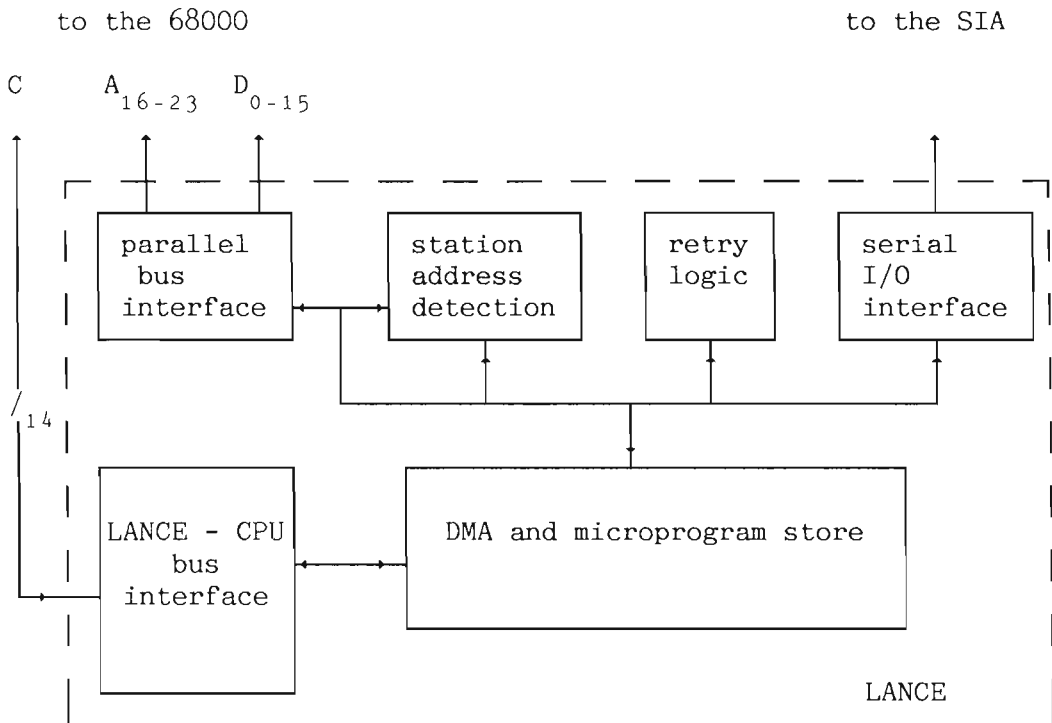

C: control signals

*Figure 3. Block diagram of the LANCE*

The LANCE operates in two modes:

- transmit
- receive

In **transmit mode**, the LANCE directly accesses data in memory and formats it into a **packet** for transmission (see Appendix B). The packet consists of:

- preamble
- sync pattern
- data
- 32-bit CRC

The LANCE transmits the packet to the SIA. It loads the first byte of data into its Silo. Then, as the LANCE transmits the preamble to the SIA, it simultaneously loads the Silo with the remaining data.

In **receive mode**, packets are loaded into the Silo via the SIA. The CRC of the received data is calculated and compared and appended to CRC field given by the packet. If the CRCs do not match, an error bit is set.

## Error reporting

---

System errors reported by the LANCE include:

- babbling transmitter (the transmitter is attempting to send more than 1518 data bytes)
- collision (collision detection malfunctions)

- missed packet (insufficient buffer space)
- memory timeout (25.6 $\mu$ s)

Packet errors include:

- CRC (data invalid)
- framing (the end of the packet was not on a byte boundary). This is also known as octet or alignment error.
- overflow/underflow (slow response to a DMA request)
- buffer (insufficient buffer space)

Detailed information on LANCE operation can be found in the vendors' manuals.

## 2.3 SIA

---

The SIA (Serial Interface Adapter - Am7992B) is a single integrated circuit featuring:

- a Manchester encoder/decoder
- collision detection

**For transmission** the SIA encodes the separate clock and NRZ data packet into a standard Manchester II serial bit stream (see Appendix B for a description of Manchester encoding).

**For reception** the SIA indicates to the LANCE that data is being received and separates the incoming Manchester-encoded data stream into clock and NRZ data.

Any collisions on the network are detected and signalled to the LANCE.

## 2.4 Local memory

---

The local memory consists of:

- 512 Kbyte DRAM (dynamic RAM)
- 1 Kbit SRAM (static RAM)
- 128 Kbyte EPROM (future option)

### 2.4.1 Local DRAM

---

The local DRAM is accessible from the ND-100 as if it were any other ND-100 memory bank. The location of the DRAM in the ND-100 address space can be set by two thumbwheels located on the card edge (see section 3.2). The bank number of the card can be read back to the ND-100 using the IOXT instruction.

Messages between the controller and ND-100 can be transferred via special mailbox areas in the DRAM.

To pass messages, the Ethernet controller can interrupt the ND-100 and vice versa. The controller's control and status registers are under the direct control of the ND-100 (see section 2.4.6 for their description).

### DRAM access priority

---

The priority of access to the DRAM is:

- ND-100 (highest)
- LANCE
- 68000 (lowest)



## Byte parity on memory

---

The DRAM includes a byte parity DRAM of 256K by 18 bits.

## Parity errors

---

The Ethernet II has two parity error tests:

- external
- internal

### external parity test

Here, the ND-100 generates an error which is reported.

#### Note

This test should only be used by ND-100 stand-alone programs. Tests under SINTRAN should only run after the memory has been tested.

The ND-100 executes the test as follows:

- it disables the parity write by using an IOXT instruction to set the **disable check bit** in the Ethernet control register (bit 8). (See page 29.)
- it then looks for the parity error signal on the bus when the error is detected
- and sets the LED marked 'PERR' on (see Section 3.2). The LED is turned off by a RESET.

### internal parity test

Here the 68000 generates parity errors and initiates an interrupt.

- the 68000 writes a one to PARITYDIS, the parity disable register (address: EF0022) to disable parity write

- any parity error is reported by a level 5 interrupt to the 68000
- the contents of PARITYDIS are read

If PARITYDIS is set together with BREAKMODE (address: EF0024), forced parity errors are used to set the breakpoint without changing the code. The parity error routine should read the BREAKMODE address to determine whether the parity error was a breakpoint or not.

## Power failure

---

The DRAM and its refresh system are connected to the stand-by power supply so that the memory contents are preserved.

The ND-100 activates its **Master Clear**, a power failure sequence, on detecting the failure of its main power supply. This includes a **power-low interrupt** to the controller which resets the controller within approximately 50 $\mu$ s. The interrupt service routine for power-low saves all registers in the 68000 and drives the HALT and RESET signals low.

At the end of the Master Clear pulse, bus arbitration is reset and the 68000 becomes bus master. The SCIP (Status Change in PIOC) register on the Ethernet controller (see Section 2.4.3) is reset 200 $\mu$ s after power low by the **Delayed Clear** pulse.

The ND-100 restarts the controller by using an IOXT instruction, which results in the 68000 fetching the system stack pointer and restart address (held in the first eight bytes of DRAM). SINTRAN (the operating system) and PIOCOS cannot restart the controller in this manner.

## Local SRAM - DRAM protection

---


The SRAM protects the DRAM from being written to:

- by input DMA.
- by the 68000 user

The SRAM is a **protect table** for the controller's DRAM.

The DRAM is divided into memory segments of 512 bytes. Each segment has a corresponding bit in the SRAM which is either set or cleared to select memory protection or not.

Read and write access to a memory segment is gained by writing a one to the address of the segment concerned plus an offset address of 15360K. A zero protects the segment from access.

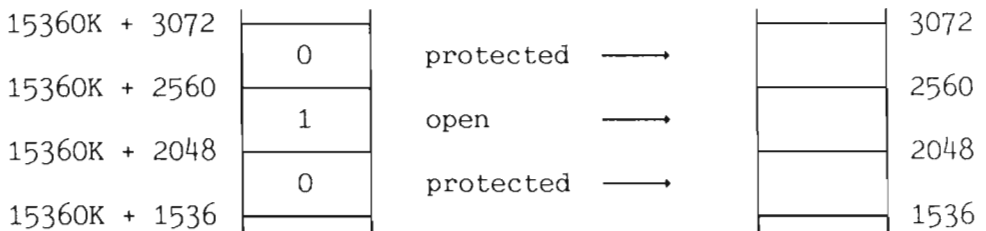

*Figure 4. Memory protection*

Attempting to access a protected area results in a bus error which will interrupt the 68000 with a write protect violation.


The protect table is established at system start-up. Programs running in 68000 Supervisor mode can access protected DRAM areas.

### 2.4.2 EPROM

---

The 128K by 16 bit EPROM can only be accessed by the 68000. The EPROM is currently not used by the controller, so the boards are delivered with empty EPROM sockets. Future developments may implement EPROM.

2.4.3 Address decoding

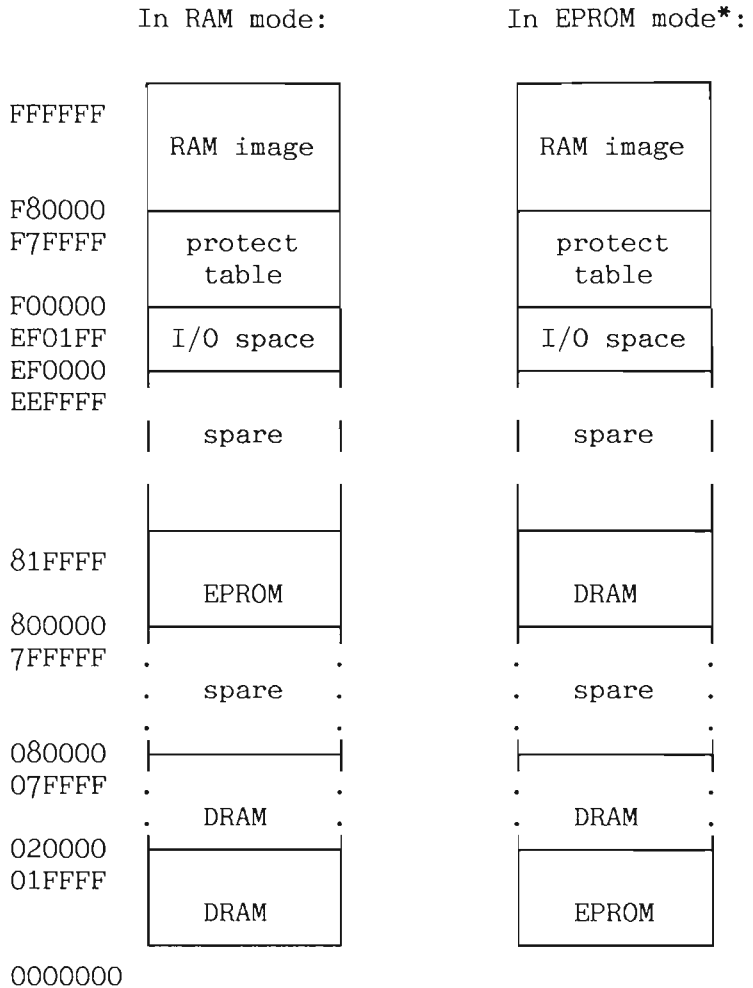

\* see previous section

**RAM image**

This area is always used by the ND-100. The LANCE and 68000 do have access.

## Addresses of other devices in the I/O address space

---

The I/O addresses within this region are decoded twice i.e. EFO0XX = EF01XX, so that PIOC and Ethernet I software can be used.

address range	used by/as:	R/W
EFO0C0 - EFO0FF	MFP	R/W
EFO0B8 - EFO0BF	ETHSTAT	R
EFO0B0 - EFO0B7	LANRESET	W
EFO0A8 - EFO0AF	XCVPW	W
EFO0A0 - EFO0A7	LANCE	R/W
EFO080 - EFO09F	SCIP	W
EFO060 - EFO07F	EAREN	R
EFO040 - EFO05F	MERRSTAT	R
EFO020 - EFO03F	MODCR	R/W
EFO010 - EFO01F	PROFF	W
EFO000 - EFO00F	not used	-

R: read

W: write

*Table 1. Addresses used in the I/O address space*

### MFP

#### Multi-Function Peripheral

The MFP uses the base address of EFO0C0 plus a displacement of 1-55 (1-37 hex) to address all the registers within the MFP, ONLY ODD addresses are used to access the MFP.

### ETHSTAT

#### Ethernet hardware status

These addresses read the current hardware status of the controller. Only two of the bits read are significant when ZERO:

bit	meaning
2	power enable
0	LAN interrupt

**LANRESET**                    **LANCE hardware reset**  
Using an address in this range will initiate a hardware reset.

**XCVPW**                    **Transceiver 12 Volt power switch**  
Writing a one to this single-bit register will enable the 12 Volt power switch on the transceiver. Writing a zero, turns the power off.

**LANCE**                    **LANCE address space**  
Only two addresses are needed to address the LANCE. They are:

address	name
EFO0A0	Register Data Port (RDP)
EFO0A2	Register Address Port (RAP)


All accesses to the LANCE are 16-bit using even-byte addresses.

**SCIP**                    **Status Change In PIOC**  
Using this address range results in an interrupt on level 12 to the ND-100.

**EAREN**                    **Error Address Enable**  
Using this address range returns the address ( $A_{1-16}$ ) of a memory error on the 68000 data bus.

**MERRSTAT****Parity Error Enable**

The information returned by these addresses has the format:

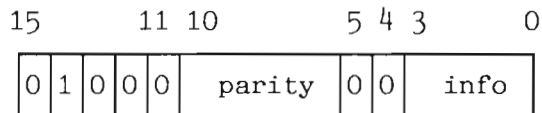

bit	description
10	write to parity
9	address bit 18
8	address bit 17
7	NGACK ) error detected in *
6	BGACK ) read access *
3	parity error in high byte
2	parity error in low byte
1	parity bit read with high byte
0	parity bit read with low byte

**Write to parity** is enabled when the bit is zero; disabled when set.

\* The logic state of the following bits/signals determine which device detected an error in read access:

NGACK bit 7	BGACK bit 6	device
0	0	ND-100
0	1	none
1	0	LANCE
1	1	68000



**MODCR****Mode control register**

This is addressed by:

address	description
EFO020	EPROMMODE
EFO022	PARITYDIS
EFO024	BREAKMODE
EFO026	SPARE

All four single-bit registers are cleared after RESET. Each register can be cleared by writing a zero or set by writing a one to its address.

**PROFF****Protection Off**

Writing a one into this address by a 68000 routine means the protect table contents are ignored.

#### 2.4.4 Ethernet transceiver power control

---


A current switch monitors the D.C. current supplied to the transceiver from the ND-100 via the controller card. The current switch will disconnect the supply on controller command or when the current level could harm hardware or data integrity.

### 2.4.5 Multifunction Peripheral (MFP)

The 68901 Multifunction Peripheral (MFP) combines many of the peripheral functions into one integrated circuit:

- eight parallel I/O lines
- interrupt controller for 16 sources
- four timers
- one full-duplex serial port for Asynchronous or Synchronous communication channel (USART)

A functional block diagram of the MFP is given below:

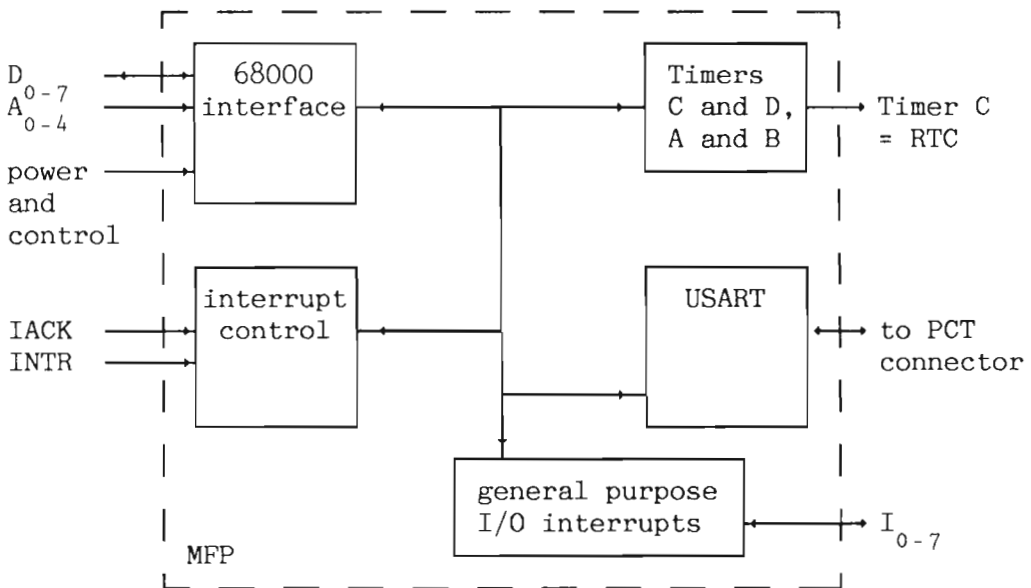

PCT: PIOC console terminal  
 RTC: real time clock

Figure 5. The Multifunction Peripheral (MFP) block diagram

The MFP is used as follows:

#### USART

The USART is connected to a 10-pin PCT (PIOC console terminal) connector. When activated, the PCT interrupts the 68000 on interrupt level 5 via the MFP.

#### Timers A-D

Timer C is used as a real time clock (RTC). Timers A,B and D are not used.

#### Interrupts

The interrupts ( $I_0$ - $I_7$ ) are assigned as follows:

interrupt	use
7	write violation
6	ND-100 interrupt
5	LANCE error *
4-0	not used

\* A LANCE error is generated when a memory cycle is stopped by any of the following:

- protect violation
- bus error
- address out of range

## MFP after RESET and initialization

---

After RESET, all the MFP's registers except for timer registers are cleared. Software then re-initializes the registers. The interrupt vectors from the MFP to the 68000 are:

vector address	indicates:
117	write violation by 68000 *
116	ND-100 requesting interrupt *
114	receive buffer full
113	receive error
112	transmit buffer empty
111	transmit error
107	LANCE memory access error
105	RTC (real time clock)

\* the ND-100 is the source

### 2.4.6 ND-100 interface

---

Messages between the controller and ND-100 can be transferred via mailbox areas in the DRAM.

To pass messages, the Ethernet controller can interrupt the ND-100 on interrupt level 12 and the ND-100 can interrupt the controller by setting the **ND interrupt** bit (Ethernet control register<sub>2</sub> - see following description).

The ND-100 will interrupt the controller on level 6 when the normal Ethernet/ND-100 communication path cannot be used.

The control and status registers are under the direct control of the ND-100.

## Ethernet control register

---

This is a 16-bit register controlling the following functions:

bit	function
15-9	not used
8	disable check bit
7	not used
6	power low
5	halt
4	reset
3	start OPCOM
2	ND interrupt
1	not used
0	enable SCIP interrupt

A **Master Clear** pulse from the ND-100 (or power-on) will set the controller's RESET and HALT signals and reset any local I/O activity.

The ND-100 starts controller activity by writing to the control register with the halt and reset bits cleared (zero).

The ND-100 writes to this register using an IOXT instruction. The Ethernet address of the controller plus 1 or 3 must be loaded into the T register before an IOXT is executed (see Section 3 - Thumbwheel selection of Ethernet address).

## Ethernet status register

---

This has the format:

bit	function
15-8	bank number
6	memory is 512 Kbytes *
5	halt
4	reset active
2	interrupt set for ND-100 on level 12
0	interrupt enabled onto ND-100 bus

\* always zero

### bank number

Bits 8 and 9 are ALWAYS zero as the controller must start on a half-megabyte boundary i.e. the bank number is **always** a multiple of four.

The ND-100 reads this register using an IOXT instruction. The Ethernet address of the controller plus 0 or 2 must be loaded into the T register before an IOXT is executed (see Section 3 - Thumbwheel selection of Ethernet address).

---

CHAPTER 3    INSTALLATION

---





This section outlines how to install your Ethernet II card. It also offers some guidelines on network configuration and equipment requirements.

<p>Note All equipment using the Ethernet II controller must be to IEEE 802.3, ISO/DIS 8802/3 standards.</p>
---

### **3.1 What you need**

---

Controller to ND-100:

- Ethernet II Controller
- Ethernet/GPIB plug panel
- internal cable between controller and plug panel

To establish an Ethernet network:

- Ethernet transceiver(s)
- fan-out unit(s)\*
- transceiver cable(s)
- coaxial cable(s)
- coaxial accessories
- repeater(s)\*
- point-to-point cable(s)\*

\* depends upon network size

## Ethernet transceiver

---

The transceiver is powered by the ND-100's 12 Volt D.C. supply via the Ethernet controller. A current switch will disconnect the power to the transceiver in the case of:

- short circuit or excessive transceiver current consumption
- low 5 Volt supply
- a power off command from the controller

A power-off command is issued:

- after jabber (data transmitted to jam the network)
- as a result of a hanging transmitter
- if the heartbeat is missing

## Fan-out unit

---

A fan-out unit acts as a transceiver multiplexer, providing eight transceiver-type connections for DTEs (Data Terminal Equipment).

## Transceiver cable

---

This cable links the transceiver to the Ethernet controller card via the ND-100's plug panel. The maximum cable length, i.e. distance between transceiver and controller, is 50m. It is a four-pair shielded cable, 75 $\Omega$  impedance.

Note

The transceiver cable is called an AUI (Attachment Unit Interface) cable in IEEE 802.3 terminology.

**connectors****cable to transceiver:**

- 15 pin D-type sub-miniature female with slide lock assembly
- Cinch type DA 51220-1 or equivalent

The transceiver must have a mating male connector with locking posts.

**cable to controller:**

- male with locking posts
- Cinch type DA 53018 or equivalent

This connector must mate with the female connector in the ND-100 plug panel.

**Coaxial cable**

---

The maximum segment length of coaxial cable is 500m. The cable is marked every 2.5m for correct transceiver installation. It has the following characteristics:

- 4 shields
- foamed dielectric
- 50Ω impedance
- 10.3mm thick
- propagation velocity: 0.77c
- supplied by one vendor only

**Cable recommendations:**

The following lists, in order of preference, steps that can be taken to reduce signal reflections caused by cable discontinuities.

- The cable segment should be made from one continuous cable.
- If segments are built up from smaller sections, cable from the same manufacturer and preferably the same batch should be used.
- If cable sections from different manufacturers are used, then standard lengths (23.4m, 70.2m, 117m) should be used.
- An arbitrary configuration of the cable should only be used if the worst-case signal reflection at any point on the cable is less than 7% of the initial signal.

**Coaxial accessories**

---

The following accessories are required:

- male n-type coaxial connector at the end of every cable segment
- female jack with a 50Ω terminator at each end of the (composite) segment
- a cable splice - female-female coaxial barrel connector - to join segments

All of these connectors must be electrically isolated from the building ground (rubber isolators are available for the Ethernet terminator and cable splice accessories).

## Repeaters

---

A repeater must be used when more than one 500m cable segment is used. Two types of repeaters are available:

- local repeater
- remote repeater

A repeater ensures that valid data is transferred over a long distance on the Ethernet. It does this by:

- regenerating preamble
- extending collision fragments
- carrying out automatic partitioning and reconnection in the event of a segment failure
- allowing manual partitioning for segment servicing or reconfiguration

A **local repeater** is used for point-to-point links between cable segments within the same building.

A **remote repeater** is used for connections between buildings.

A maximum of two repeaters can be used in the path between any two stations connected to the Ethernet. However, more than two repeaters can be used providing the **round-trip delay** ( $51\mu\text{s}$ ) is not exceeded.


## Point-to-point cable

---

Coaxial segments in the same building can be joined by using a link segment of up to 1 km.


The link can be greater than 1 km providing the **round-trip delay** ( $51\mu\text{s}$ ) is not exceeded.

The point-to-point cable consists of a double fibre optic cable terminated by 9mm SMA connectors at each end.

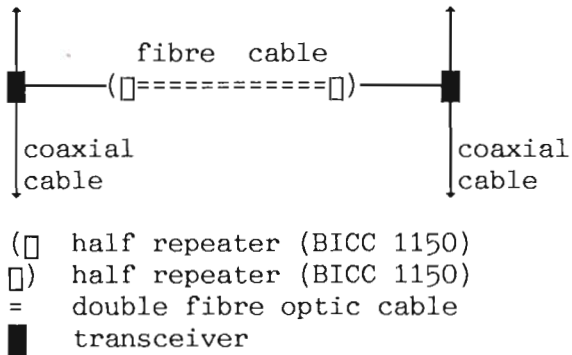

*Figure 6. A point-to-point link*

3.2 What to set

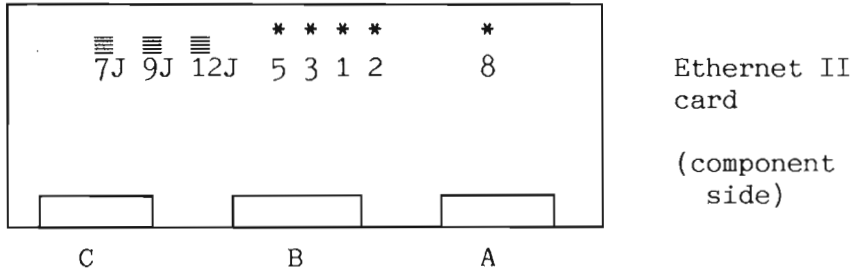

key:

*	LED	colour	denotes
	8	yellow	external 12V transceiver
	5	red	memory parity error
	3	yellow	active memory cycle
	2	red	68000 halt
	1	red	68000 reset

☰	thumbwheel	selects	page ref:
	7J,9J	memory bank number	40
	12J	Ethernet number	41

A,B,C edge connectors

Figure 7. LED activity and thumbwheel selection on an Ethernet II card

### Thumbwheel selection of memory bank

---

The thumbwheels numbered 7J and 9J select the memory bank accessible to the controller. The thumbwheel numbers correspond to the memory segments as follows:

thumbwheel 7J 9J		bank number	PIOC address space (Kbytes)	Physical page (hex)
0	0-3	0	0 - 512	0 - FF
0	4-7	4	512 - 1024	100 - 1FF
0	8-11	8	1024 - 1536	200 - 2FF
0	12-15	12	1536 - 2048	300 - 3FF
1	0	16	2048 - 2560	400 - 4FF
.	.	.	.	.
.	.	.	.	.
↓	↓	↓	↓	↓
etc.	etc.	etc.	etc.	etc. etc.

*Table 2. Thumbwheel selection of memory banks*



### Thumbwheel selection of Ethernet number

---

An ND-100 can control four Ethernet controllers. The Ethernet address of a controller in the system must be set by thumbwheel 12J.


thumbwheel 12J	Ethernet number	Ethernet address (device number)	Ident Code
0	1	140360 <sub>8</sub>	140034 <sub>8</sub>
1	2	140364 <sub>8</sub>	140035 <sub>8</sub>
2	3	140370 <sub>8</sub>	140036 <sub>8</sub>
3	4	140374 <sub>8</sub>	140037 <sub>8</sub>

*Table 3. Thumbwheel selection of Ethernet address*

The Ethernet address (device number) given above is the base address, each controller is assigned four addresses, two for reading from and two for writing to the ND-100 (see Section 2.4.6).

### 3.3 How to connect to the network

---

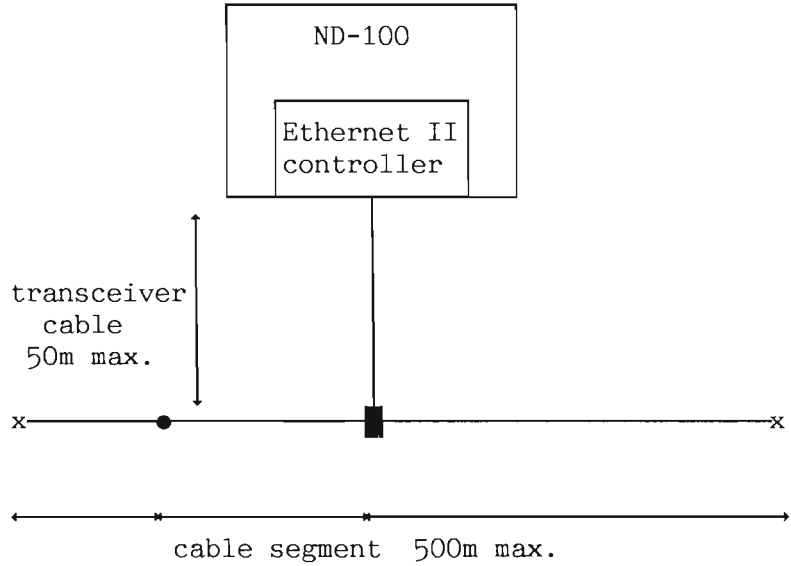

x : 50Ω terminator with insulator

■ : transceiver

● : cable splice with insulator

↔ : standard lengths of coaxial cable  
(to a maximum of 500m)

Figure 8. Connecting to the Ethernet

Configuration:

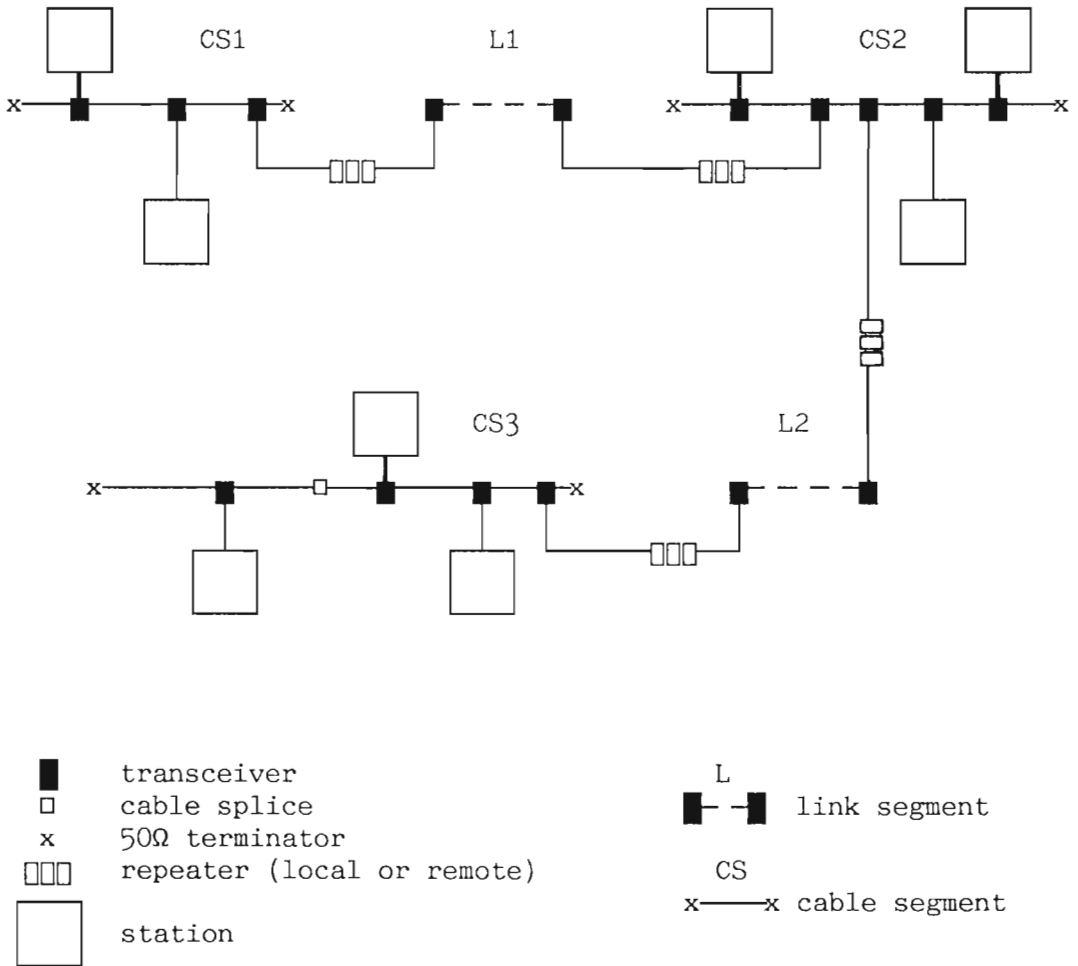


Figure 9. A typical multi-station, multi-segment Ethernet

### 3.4 How to upgrade to an Ethernet II

---

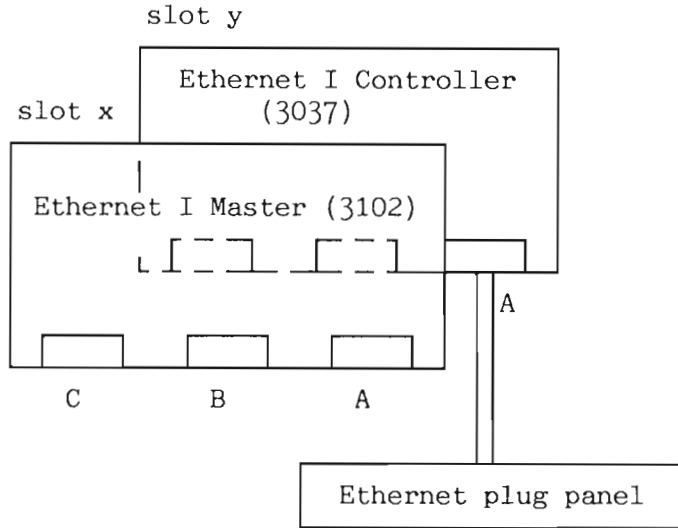


Figure 10. Upgrading from an Ethernet I

1. Remove the Ethernet I Master and Controller cards.
2. Remove the cable linking the B-connectors.
3. Insert the Ethernet II card in the slot that was occupied by the Ethernet I Controller card (slot y).
4. Reset the thumbwheel settings of any I/O cards above the Ethernet memory space.
5. IF any DMA request sources are installed at slot numbers greater than the Ethernet controller, insert a dummy plug linking the following connector signals in the slot once occupied by the Ethernet I Master (slot x):

INGRANT to OUTGRANT  
 INIDENT to OUTIDENT

6. Run configuration test.
7. Reinstall COSMOS Ethernet option.

### 3.5 Ethernet statistics

---

A monitor program can be run as follows:

```
@(UTI)ENCOS-MON↓
```

```
-----  
                COSMOS ETHERNET MONITOR  
                VERSION xxx  
                FOR ND-110063 ETHERNET II  
                (type HELP for list of available commands)  
-----
```

```
ENTER COMMAND: STAT↓
```

```
  get statistics
```

```
  server number (0/1/2/3):0
```

```
  system name:name of system
```

```
  source of statistics is specified by integer code as follows:
```

```
  0 => MA Logical Address statistics
```

```
  N => Network Server Statistics for connection to system N
```

```
  specify statistics source (0/N):0
```

```
MA stats
```

```
via physical copy (Y/N):N
```

Figure 11. Calling Ethernet statistics from the COSMOS Monitor

where xxx represents the current version number of the COSMOS Monitor

This will return the statistics for Ethernet server 0. The following is an example of statistics reported to the terminal. The text which is not highlighted is a cross-reference to the relevant registers in the LANCE (it is NOT reported to the terminal).

----- ETHERNET MA STATISTICS FOR LOCAL SYSTEM -----		CSR <sub>0</sub>	TMD	RMD
frames transmitted successfully	263	TINT		
including after one collision	0	TINT	ONE	
and after multiple collisions	0	TINT	MORE	
frames aborted(excess collisions)	0	TINT	RTRY	
frames received and given to user	263	RINT		
received and dropped	0	* RINT		
missed	0	MISS		
CRC errors	0			CRC
alignment errors	0			FRAM
FIFO overflows	0			OFLO
buffer overflows	0			BUFF
bad MA length field	0	*		
loss of carrier during transmit	0		LCAR	
transmit underflow	0		UFLO	
late collision	0		LCOL	
bad length received	0	*		
bad address received	0	*		
missing transceiver heartbeat	0	CERR		
jabber detected	1	BABL		
memory error	0	MERR		
hung transmit state	0	*		
restarts	0	*		

CSR: Control and Status Register  
 RMD: Receive Message Descriptor  
 TMD: Transmit Message Descriptor  
 \*: statistic determined by the 68000

Figure 12. Typical Ethernet statistics returned by the COSMOS Monitor

## Description of COSMOS Monitor statistics

---

**frames transmitted successfully**

This is the number of successfully transmitted frames.

**frames transmitted successfully after one collision**

This the number of frames that required one retry to transmit the packet.

**frames transmitted successfully after multiple collisions**

This the number of frames that required more than one retry to transmit the packet.

**frames aborted**

This is the number of frames aborted. The transmitter has failed after sixteen retries to transmit the frame.

**frames received and given to the user**

This is the number of successfully received frames.

**frames received and dropped**

The number of frames dropped after reception if the ENNS buffer space is full.

**frames missed**

This is the number of times the receiver lost a packet.

**CRC errors**

This is the number of CRC errors detected by the receiver.

**alignment errors**

This is the number of alignment or framing errors received. The error is flagged when a received packet contains a non-integer multiple of eight bits and a CRC error.

**FIFO overflows**

This is the number of times the Silo overflowed

resulting in all or part of the incoming packet being lost.

**Buffer overflows**

A buffer overflow is detected when either the Silo overflow occurred before the LANCE received the next status information or the LANCE does not own the next buffer whilst data-chaining a received packet.

**bad MA length field**

This is the number of received frames with a field length inconsistent to that in the DMA command byte.

**loss of carrier during transmit**

This is the number of times the carrier input signal to the LANCE (RENA) has been lost whilst the LANCE was transmitting. The LANCE continues to transmit the packet but will not retry if transmission fails.

**transmit underflows**

This is the number of times the transmitter has truncated a message due to late data being received from memory. In this case, the Silo is emptied before the end of the packet was reached.

**late collision**

The number of collisions that occurred after the slot time.

**bad length received**

The number of incorrect length fields received.

**bad address received**

The number of incorrect addresses received.

**missing transceiver heartbeat**

This is the number of times a collision occurring after LANCE transmission fails to activate the LANCE within 2 $\mu$ s.

**jabber detected**

This is the number of times a transmitter timeout error has occurred. This timeout occurs



when the transmitter has been on the channel longer than the time required to send the maximum packet length.

**memory error**

This error is set when the LANCE, as a Bus Master, has not received a READY signal in response to an address. This error turns the LANCE transmitter and receiver off.

**hung transmit state**

The number of one second software timeouts on awaiting transmit commands.

**restarts**

The number of restarts given by the ND-100 to the 68000.



---

**APPENDIX A GLOSSARY**

---



---

**APPENDIX A GLOSSARY**

---

backoff	The time a transmitting node waits before retransmitting after a collision.
68000	16-bit microprocessor
c	speed of light in a vacuum ( $3 \times 10^8 \text{ ms}^{-1}$ )
CPU	Central Processing Unit
CRC	Cyclic Redundancy Checksum
CSMA/CD	Carrier Sense Multiple Access/Collision Detect
DMA	Direct Memory Access
Ethernet	A protocol for communicating between devices on a Local Area Network.
Ethernet I	An Ethernet controller for ND-100 systems based on a two card solution (Ethernet master and a controller).
frame	packet + preamble
FIFO	First-In, First-Out (called Silo as implemented within the LANCE).
heartbeat	A signal generated by a transceiver to indicate it is operative. This is also known as SQE.
IEEE	Institute of Electrical and Electronic Engineers (U.S.A.)
ISO	International Standards Organisation
jam	Nodes jam the network by transmitting simultaneously to ensure all nodes know a collision has occurred on the network.
LAN	Local Area Network

LANCE	Local Area Network Controller for Ethernet
LED	Light Emitting Diode
ND-100 series	The family of 16-bit general purpose computers from Norsk Data consisting of the following: <ul style="list-style-type: none"> <li>ND-100</li> <li>ND-100/CE</li> <li>ND-100/CX</li> <li>ND-100 Compact</li> <li>ND-100 Satellite</li> <li>ND-110/CE</li> <li>ND-110/CX</li> </ul>
node	An access point to (or a device on) the Ethernet.
NRZ	Non-Return-to-Zero...a type of data encoding.
OPCOM	OPERator COMMunication...direct communication with the ND-100 CPU.
OSI	Open Systems Interconnection
packet	Significant information within the Ethernet frame (destination address to FCS fields).
PIOC	Programmable Input/Output Controller
preamble	preamble + sync (or SFD)
segment	in memory...512K of contiguous memory of a cable...fixed length of cable.
SIA	Serial Interface Adapter
SQE	Signal Quality Error (see heartbeat)

---

**APPENDIX B    ETHERNET PROTOCOL DETAILS**

---





---

 APPENDIX B ETHERNET PROTOCOL DETAILS
 

---

**Frame format**


---

IEEE 802.3		Ethernet
preamble	.....	preamble
SFD 10101011 <sub>2</sub>	64 bits	sync 11 <sub>2</sub>
destination address	..... 6 bytes	destination address
source address	..... 6 bytes	source address
length	..... 2 bytes	type
data	..... 46-1500 bytes	data
pad	.....	FCS
FCS		

## IEEE 802.3 - Ethernet differences

---

### Frame terminology

---

An IEEE 802.3 and Ethernet frame should be identical. Each protocol divides the frame into fields with different names. A short description of the field terminology is given below.

Each octet (byte) in the frame is transmitted/received low-order bit first (see FCS). Transmission/reception begins with the preamble field.

- preamble** A sequence of bits transmitted to synchronize clocks and other devices on the network. The bit pattern is alternate ones and zeros (1010...10). An Ethernet frame transmits a further six bits as preamble compared to the IEEE 802.3 (equivalent to the first six bits of the SFD).
- SFD - IEEE 802.3** **Start Frame Delimiter.** This is a byte of data indicating the start of a frame (information) after the preamble. The byte is always  $10101011_2$  (IEEE 802.3 only).
- sync - Ethernet** An Ethernet sync field consists of two bits both set to one.

Note

The actual bit pattern of the preamble and SFD (IEEE 802.3) will be the same as the preamble and sync (Ethernet).
---

**source address**

This six byte field specifies the station sending the frame. It has the format:

byte	1	2	3	4	5	6
hex value	08	00	26	LB	HB	00

The first three bytes are the **global ND address**. A number unique to ND Ethernet equipment and registered with the IEEE and ISO.

The next two bytes are the high and low bytes (HB and LB) of an ND system.

The last byte is zero.

**destination address**

This six byte field specifies the station(s) for which the frame is intended.

The first two bits have the following significance:

bit	value	type of address
0	0	individual
	1	group *
1	0	global
	1	local/broadcast

\* a group address can select none, one, more than one or all stations.

**length - IEEE 802.3**

This two byte field gives the number of data bytes in the frame. If the number of data bytes is less than 64 bytes a pad field is added to allow the shorter data field to be received.

**type - Ethernet**

This two byte field specifies the type of packet. Packet length is supplied by the LANCE during reception.

**data** This is Manchester-encoded data (see next section).

**FCS** **Frame Check Sequence** A cyclic redundancy check (CRC) is used by the transmit and receive algorithms to monitor any corruption of information received/transmitted on the Ethernet. The FCS (Frame Check Sequence) field of the frame will contain the frame's CRC value.

The CRC is calculated from the following frame fields:

- source address
- destination address
- length (type)
- data
- pad

Note: The low-order bit transmitted/received first of the FCS is the most significant term of the CRC polynomial and the high-order bit the least significant.

## Manchester encoding

---

The separate data and clock signals are encoded by making, at the centre of a bit cell:

- a positive-going transition for a logical ONE
- a negative-going transition for a logical ZERO

and

- a transition at each cell boundary between consecutive bit cells of the same value.

Three examples of a Manchester-encoded bit stream are given below:

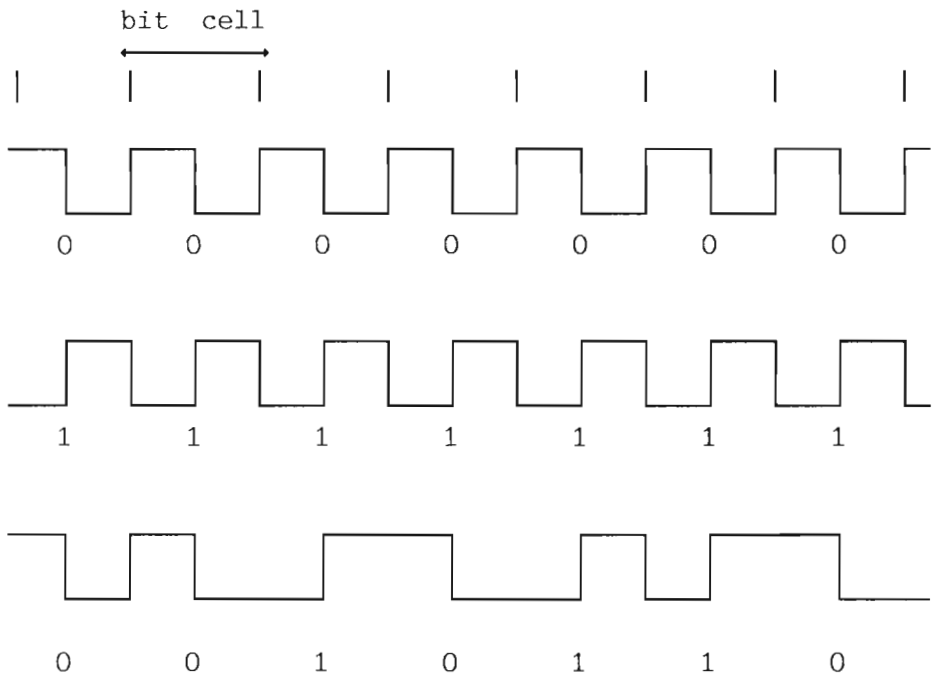


Figure 13. Examples of Manchester-encoded signals



---

**APPENDIX C    ND ETHERNET PRODUCT GUIDE**

---





---

 APPENDIX C ND ETHERNET PRODUCT GUIDE
 

---

**Ethernet accessories**


---


ND Number	Product Name	
107700	Transceiver cable, 5m	
107710	Transceiver cable, 15m	
107720	Ethernet 50Ω terminator	
107730	Ethernet cable splice	
107740	Ethernet transceiver	
107750	Local repeater package	A
107760	Ethernet coaxial cable, 23.4m	
107770	Ethernet coaxial cable, 70.2m	
107780	Ethernet coaxial cable, 117m	
107790	Remote repeater package	B
107830	Fan out unit package	

A includes 1 repeater, 2 transceivers and two transceiver cables

B includes 2 repeaters, 2 transceivers and two 15m transceiver cables

## OSI model and ND's implementation

---

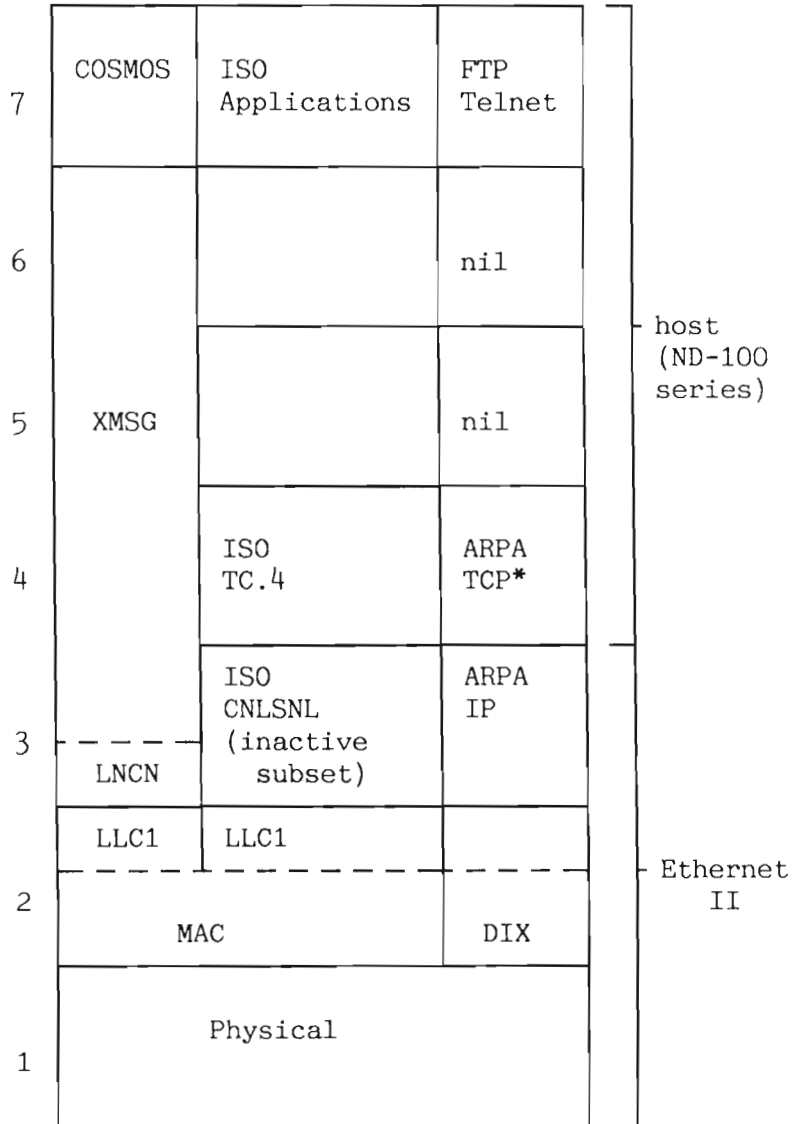

\* to be implemented late 1987 by Ethernet II

DIX : Digital-Intel-Xerox specified protocol  
 ARPA : Advanced Research Projects Agency  
 LLC : Logical Link Control  
 CNLSNL: Connectionless Network Layer  
 LNCN : Local Network COSMOS Network Layer  
 MAC : Media Access Control





68000 . . . . .	11, 17, 18, 20, 53
interrupt levels . . . . .	12
68901	
see Multifunction Peripheral (MFP) . . . . .	26
access	
read . . . . .	19
write . . . . .	19
address	
decoding . . . . .	21
destination . . . . .	59
error . . . . .	48
Ethernet . . . . .	29, 30, 41
global ND . . . . .	59
I/O space . . . . .	22
offset . . . . .	19
source . . . . .	59
alignment error . . . . .	15, 47
babbling transmitter . . . . .	14
backoff . . . . .	7, 53
bank number . . . . .	16, 30
BREAKMODE . . . . .	18
breakpoint . . . . .	18
buffer space . . . . .	15
bus error . . . . .	19
c . . . . .	53
cable	
recommendations . . . . .	36
cable segment . . . . .	36, 54
cable splice . . . . .	36
cable type	
coaxial . . . . .	33, 35
point-to-point . . . . .	38
point-to-point . . . . .	33
transceiver . . . . .	33, 34
coaxial cable . . . . .	33, 35

collision . . . . .	6, 14
late . . . . .	7, 48
COSMOS . . . . .	4
COSMOS Ethernet Monitor	
how to run it . . . . .	45
statistics . . . . .	46
CPU . . . . .	53
CRC . . . . .	6, 13-15, 53, 60
error . . . . .	47
CSMA/CD . . . . .	6, 53
current switch . . . . .	34
disable check bit . . . . .	17
DMA . . . . .	53
DRAM . . . . .	16
access priority . . . . .	16
address . . . . .	16
byte parity . . . . .	17
protection . . . . .	19
EAREN . . . . .	22
ECMA 80/81/82 . . . . .	7
EPROM . . . . .	16, 20
EPROM mode . . . . .	21
errors	
alignment . . . . .	15
CRC . . . . .	47
frame . . . . .	47
octet . . . . .	15
packet . . . . .	15
system . . . . .	14
Ethernet . . . . .	53
protocol . . . . .	6
Ethernet address . . . . .	41
Ethernet control register . . . . .	17, 29
Ethernet I . . . . .	53
Ethernet II	
block diagram . . . . .	5
communication architecture . . . . .	4
hardware . . . . .	5
implementation . . . . .	11
installation . . . . .	33
statistics . . . . .	45
Ethernet protocol . . . . .	57
Ethernet status register . . . . .	30

Ethernet transceiver . . . . .	33
power control . . . . .	11
Ethernet/GPIB plug panel . . . . .	33
ETHSTAT . . . . .	22
fan-out unit . . . . .	33
FCS . . . . .	60
fibre optic cable . . . . .	38
FIFO . . . . .	7, 13, 47, see Silo, 53
frame . . . . .	53
format . . . . .	57
statistics . . . . .	47
terminology . . . . .	58
frame errors . . . . .	47
framing . . . . .	15
future option . . . . .	16
half-repeater . . . . .	37
HALT . . . . .	11, 18, 29
heartbeat . . . . .	34, 53
missing . . . . .	48
I/O address space . . . . .	22
IEEE . . . . .	53
IEEE 802.3 . . . . .	3, 7, 33
internal cable . . . . .	33
interrupts . . . . .	16
IOXT instruction . . . . .	16, 18
ISO . . . . .	53
ISO model	
Ethernet II layers . . . . .	4
ISO/DIS 8802/3 . . . . .	3, 7, 33
isolators . . . . .	36
jabber . . . . .	34, 48
jam . . . . .	6, 34, 53
LAN . . . . .	53

LANCE . . . . .	11, 13, 22, 46,
error reporting . . . . .	54
error reporting . . . . .	14
features . . . . .	13
operation . . . . .	14
LANCE error . . . . .	27
LANRESET . . . . .	22
LED . . . . .	17, 54
length	
error . . . . .	48
length field . . . . .	59, 60
LLC . . . . .	4
local memory . . . . .	11
local processor	
68000 . . . . .	11
local repeater . . . . .	37
MAC . . . . .	4
mailbox . . . . .	16, 28
Manchester encoder/decoder . . . . .	15
master clear . . . . .	18, 29
memory	
error . . . . .	49
segment . . . . .	19, 54
timeout . . . . .	15
MERRSTAT . . . . .	22
messages . . . . .	16
MFP . . . . .	11, 22
missed packet . . . . .	15
MODCR . . . . .	22
Multifunction Peripheral (MFP) . . . . .	26
ND-100	
bus interface . . . . .	11
series . . . . .	54
node . . . . .	54
NRZ . . . . .	15, 54
octet error . . . . .	15
offset address . . . . .	19
OPCOM . . . . .	54
OSI . . . . .	54
OSI reference model . . . . .	4, 66
overflow/underflow . . . . .	15, 48



- packet . . . . . 14, 54
  - errors . . . . . 15
  - missed . . . . . 15
  - runt . . . . . 7
- packet errors . . . . . 47
- pad field . . . . . 60
- parity error
  - forced . . . . . 18
  - tests . . . . . 17
- PARITYDIS . . . . . 17
- PCT . . . . . 26, 27
- PIOC . . . . . 54
- point-to-point cable . . . . . 33, 38
- power failure . . . . . 18
- power off command . . . . . 34
- power-low interrupt . . . . . 18
- preamble . . . . . 6, 54, 58
- PROFF . . . . . 22
- protect table . . . . . 19
  
- RAM mode . . . . . 21
- receive mode . . . . . 14
- remote repeater . . . . . 37
- repeater . . . . . 33, 37
  - half . . . . . 37
  - local . . . . . 37
  - maximum number . . . . . 37
  - remote . . . . . 37
- RESET . . . . . 11, 17, 18, 29
  - power failure . . . . . 18
  
- SCIP . . . . . 18, 22
- segment
  - cable . . . . . 36, 54
  - memory . . . . . 19, 54
- SFD
  - Start Frame Delimiter . . . . . 58
- SIA . . . . . 11, 14, 15, 54
- Silo . . . . . 6, 13, 14, 47, 48, 53
- slot time . . . . . 48
- SQE . . . . . 54
- sync field . . . . . 58

system	
errors . . . . .	14
terminator . . . . .	36
thumbwheel . . . . .	16
12J . . . . .	41
7J . . . . .	40
9J . . . . .	40
timeout	
software . . . . .	49
transceiver . . . . .	34
disconnection . . . . .	34
transceiver cable . . . . .	33, 34
transmit mode . . . . .	14
type field . . . . .	59, 60
USART . . . . .	27
write protect violation . . . . .	19
interrupt . . . . .	27
XCVPW . . . . .	22

The information in this manual is subject to change without notice. Norsk Data A.S assumes no responsibility for any errors that may appear in this manual. Norsk Data A.S assumes no responsibility for the use or reliability of its software on equipment that is not furnished or supported by Norsk Data A.S. Copyright © 1987 by Norsk Data A.S.

**UPDATING**

Manuals can be updated in two ways, new versions and revisions. New versions consist of a completely new manual which replaces the old one, and incorporate all revisions since the previous version. Revisions consist of one or more single pages to be merged into the manual by the user, each revised page being listed on the new printing record sent out with the revision. The old printing record should be replaced by the new one.

New versions and revisions are announced in the ND Customer Support Information and can be ordered from the address below.

The reader's comments form at the back of this manual can be used both to report errors in the manual and give an evaluation of the manual. Both detailed and general comments are welcome.

PRINTING RECORD	
PRINTING	NOTES
7/87	Version 1

ND-12.055.1 EN  
Ethernet II Controller

**RING BINDER OR PLASTIC COVER**

The manual can be placed in a ring binder for greater protection and convenience of use. Ring binders may be ordered at a price of Nkr. 45.- per binder.

The manual may also be placed in a plastic cover. This cover is more suitable for manuals of less than 100 pages than for larger manuals.

Please send your order, as well as all types of inquiries and requests for documentation to the local ND office, or (in Norway) to:

Graphic Center  
Norsk Data A.S  
P.O.Box 25 BOGERUD  
N-0621 OSLO 6 - Norway

I would like to order

..... Ring Binders, B5, at NOK 35.- per binder

..... Ring Binders, A4, at NOK 45.- per binder

..... Plastic Covers, A4, at NOK 10.- per cover

Name: .....

Company: .....

Address: .....





## SEND US YOUR COMMENTS!

Are you frustrated because of unclear information in our manuals? Do you have trouble finding things?

Please let us know if you:

- find errors
- cannot understand information
- cannot find information
- find needless information.

Do you think we could improve our manuals by rearranging the contents? You could also tell us if you like the manual.



Send to:

Norsk Data A.S  
Documentation Department  
P.O. Box 25 BOGERUD  
N - 0621 OSLO 6 - Norway

## NOTE!

This form is primarily for documentation errors. Software and system errors should be reported on Customer System Reports.

Manual Name: \_\_\_\_\_ Manual number: \_\_\_\_\_

Which version of the product are you using? \_\_\_\_\_

What problems do you have? (use extra pages if needed) \_\_\_\_\_

---

---

---

---

---

---

---

---

Do you have suggestions for improving this manual? \_\_\_\_\_

---

---

---

---

---

---

---

---

Your name: \_\_\_\_\_ Date: \_\_\_\_\_

Company: \_\_\_\_\_ Position: \_\_\_\_\_

Address: \_\_\_\_\_

What are you using this manual for? \_\_\_\_\_

---

---





