Date: 18 January 1984

# INSTALLATION OF ND-100 PASCAL. VERSION J.

#### 1 FILES

To install the Nord Pascal system, the following files are needed:

- 1 PASCAL-COD
  The Pascal compiler in BRF format.
- 2 PASCAL-LIB or PASCAL-2LIB
  The Pascal run-time library in BRF format. PASCAL-LIB is used with
  one-bank code, while PASCAL-2LIB is used with two-bank code.
- 3 PASCAL-ERR
  The compile-time error messages in symbolic form.

### 2 INSTALLATION PROCEDURE

- 1 Copy PASCAL-LIB to a system file named PASCAL-LIB:BRF. Copy PASCAL-2LIB to a system file named PASCAL-2LIB:BRF.
- 2 Copy PASCAL-ERR to a system file named PASCAL-ERR:SYMB.
- 3 The Pascal compiler runs as a two-bank program. Be aware that a terminal running the compiler or two-bank Pascal programs must have 128K user segments.

To dump the PASCAL compiler as a re-entrant subsystem, enter the following commands. The commands marked (o) are optional: When the compiler prints a source program, it will by default print 60 (decimal) lines per page. To change this number, enter the \*DEFINE LINPP n command (remember that n must be octal). The \*DEFINE NOBUF 4 command will set the number of files being buffered to 4. This will give better performance when programs with \$INCLUDE commands are compiled.

# SINTRAN version H:

**§NRL** 

\*IMAGE-FILE 100

\*SIZE 1500

(o) \*DEFINE LINPP n

(o) \*DEFINE NOBUF 4

\*LOAD PASCAL-COD PASCAL-2LIB

\*VALUE PASCAL

XXXXXX

\*VALUE CONTINU

12

уууууу

\*DUMP "PASCAL: PROG", xxxxxx, yyyyyy

\*EXIT

§DITAP "PASCAL" PASCAL

\$DUMP\_REENTRANT PASCAL, xxxxxx, yyyyyy, PASCAL

# SINTRAN version I or later:

**\$NRL** 

\*IMAGE-FILE 100

\*SIZE 1500

(o) \*DEFINE LINPP n

(o) \*DEFINE NOBUF 4

\*LOAD PASCAL-COD PASCAL-2LIB

\*VALUE PASCAL

XXXXXX

\*VALUE CONTINU

уууууу

\*DUMP "PASCAL: PROG", xxxxxx, yyyyyy

\*EXIT

\$DUMP-PROGRAM-REENTRANT PASCAL, PASCAL

The installation is now complete, and the system can be used according to the user manual.